

# AC Current Transducer AP-B420L

Split-core transducer for the electronic measurement of AC sinusoidal waveform currents, with galvanic separation between the primary circuit and the secondary circuit. Switch selectable measuring ranges and RMS 4-20 mA current output (loop powered).




# Electrical data

Primar	ry nominal current I <sub>PN</sub> (At RMS)	Output current I <sub>out</sub> (mA)	Types	RoHS since date code
	10, 25, 50	4-20	AP 50 B420L	47129
	50, 75, 100	4-20	AP 100 B420L	47113
	100, 150, 200	4-20	AP 200 B420L	47150
	200, 300, 400	4-20	AP 400 B420L	47150
U <sub>c</sub>	Supply voltage (Ic	pop powered)	+12 24	V DC
$R_{\rm L}$	Load resistance, with $U_{\rm c}$ = +24 V DC <sup>1)</sup>		< 350	Ω
ISL	Output current lim	nitation <sup>2)</sup>	< 25	mA
Î <sub>P max</sub>	Primary withstanc	l peak current (maximum)	no limitatio	n

## Accuracy - Dynamic performance data

ε	Error @ $I_{PN}$ , $T_{A}$ = 25 °C (excluding offset)	< ±1	% of $I_{PN}$
$\varepsilon_{\rm L}$	Linearity error $(0 \dots \pm I_{PN})$	< ±0.5	% of $I_{\rm PN}$
IOE	Electrical offset current @ $T_A$ = 25 °C	4	mA
TCIOE	Temperature coefficient of I <sub>OE</sub>	±1	μA/K
TCI <sub>out</sub>	Temperature coefficient of I <sub>out</sub> (% of reading)	±0.1	%/K
t <sub>D 90</sub>	Delay time to 90 % of the final output value for $I_{PN}$ step	< 150	ms
BW	Frequency bandwidth (±1 %)	30 2000	Hz

<sup>1)</sup>Max. Load Resistance vs. Supply voltage Notes:

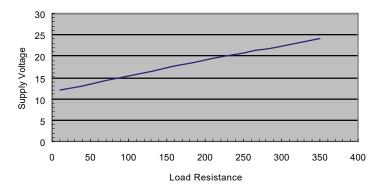

- <sup>2)</sup> The output current will never exceed this value for safety and protection reasons. The output value is not valid when measuring above the primary nominal current value.
- <sup>3)</sup>Although the transducer can withstand very high currents, the measuring performance specified in the datasheet is valid within the 4-20 mA output range only.

N°74.43.25.000.0; N°74.43.34.000.0; N°74.43.44.000.0; N°74.43.48.000.0

1June2022/Version 8

LEM reserves the right to carry out modifications on its transducers, in order to improve them.





## **Features**

- RMS output (average)
- Split-core type
- Loop powered 4-20 mA current output
- DIN rail or Panel mounting
- Switch selectable measuring ranges
- Insulating plastic case recognized according to UL 94-V0.

# **Advantages**

- Ø 18 mm
- High insulation between primary and secondary circuits
- Eliminates insertion loss
- Easy installation.

## **Applications**

- Automation systems Analog current reading for remote monitoring (e.g. motor) and sotware alarms.
- Panel meters Simple connection to power consumption displays.

# **Application domains**

- Energies
- Automation.



# Current Transducer AP-B420L

Ge	neral data					
$T_{A}$ $T_{A  \mathrm{st}}$ RH	Ambient operating temperature Ambient storage temperature Relative Humidity (non-condensing) <sup>1)</sup> Altitude above sea level (indoor use only)	-20 -20 ≤ 85 2000		°C °C % m		
m IPxx	Mass Protection degree	90 IP 20		g		
Ins	ulation coordination					
$U_{\rm Nm}$	Rated insulation RMS voltage <sup>2)</sup> with IEC 61010-1 standards and following conditi - Reinforced insulation - Over voltage category CAT III - Pollution degree PD2	ions:	300	V		
$U_{\rm d}$	RMS voltage for AC insulation test <sup>3)</sup> 50 Hz, 1 min	n	4.13	kV		
$U_{\rm t}$	Partial discharge test voltage ( $q_m < 10 \text{ pC}$ )		1.5	kV		
$U_{\rm Ni}$	Impulse withstand voltage 1.2/50 µs		6.1 5.5	kV		
$d_{Cp}$	Creepage distance Clearance <sup>4)</sup>		5.5	mm mm		
d <sub>cı</sub> CTI	Comparative tracking index (Group I)		600			
<u>Notes</u> :	<sup>1)</sup> Long-term exposure to high humidity environment may affect to product reliability.					
	<ul> <li><sup>2)</sup> If insulated cable is used for the primary circuit, could be improved according to the insulation c cable manufacturer.</li> <li>For example:</li> <li>Cable insulation (primary) Category</li> <li>HAR 05</li> <li>600 V CAT III</li> </ul>	-		-		

HAR 07 1000 V CAT III

<sup>3)</sup> Between primary (completely filling the primary aperture) and secondary.

<sup>4)</sup> Insulation distance between primary and secondary may be reduced at actual Installation depending on type and shape of primary conductor. In such case, it is highly recommended to use insulated cable in order to maintain required insulation voltage.



# Current Transducer AP-B420L

### Safety and warning notes

In order to guarantee safe operation of the transducer and to be able to make proper use of all features and functions, please read these instructions thoroughly! Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications. Ensure you get up-to-date technical information that can be found in the latest associated datasheet under <u>www.lem.com</u>.



#### Caution! Risk of danger

Ignoring the warnings can lead to serious injury and/or cause damage! The electric measuring transducer may only be installed and put into operation by qualified personnel that have received an appropriate training.

The corresponding national regulations shall be observed during installation and operation of the transducer and any electrical conductor. The transducer shall be used in electric/electronic equipment with respect to applicable standards and safety requirements and in accordance with all the related systems and components manufacturer' operating instructions.



### Caution, Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (eg. primary conductor, power supply). The user shall ensure to take all measures necessary to protect against electical shock. The transducer is a build-in device containing conducting parts that shall not be accessible after installation.

A protective enclosure or additional insulation barrier may be necessary. The transducer shall not be put into operation if the jaw opening is open (split core version) or the installation is not completed.

Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.

Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.



# Dimensions AP-B420L (in mm)

