

## Datasheet

This guide is designed to help you set up and install the R-GAGE T30R sensor. For complete information on programming, performance, troubleshooting, dimensions, and accessories, please refer to the Product Manual at [www.bannerengineering.com](http://www.bannerengineering.com). Search for part number 217048 to view the Product Manual. Use of this document assumes familiarity with pertinent industry standards and practices.

### WARNING:



- **Do not use this device for personnel protection**
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

### WARNING:




- **N'utilisez pas ce dispositif pour la protection du personnel.**
- L'utilisation de ce dispositif pour la protection du personnel pourrait entraîner des blessures graves ou mortelles.
- Ce dispositif n'est pas équipé du circuit redondant d'autodiagnostic nécessaire pour être utilisé dans des applications de protection du personnel. Une panne ou un dysfonctionnement du dispositif peut entraîner l'activation ou la désactivation de la sortie.

**IMPORTANT:** To satisfy RF exposure requirements, this device and its antenna must operate with a separation distance of at least 20 cm (7.9 in) from all persons.

## T30R Wiring


Quick disconnect wiring diagrams are functionally identical.

*Push-pull Output and Analog Current Output*

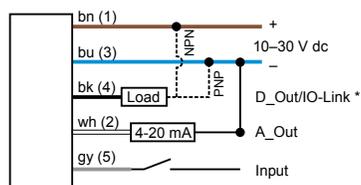


\* Push-Pull output. User-configurable PNP/NPN setting.

*Push-pull Output and Analog Voltage Output*

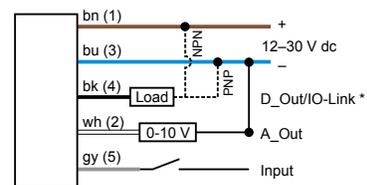

\* Push-Pull output. User-configurable PNP/NPN setting.


*Dual Discrete Output*

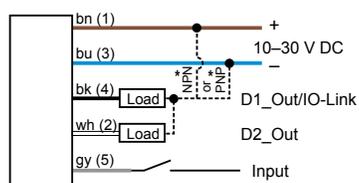

\* Push-Pull output.  
User-configurable PNP/NPN setting.

### Key:

- 1 = Brown
- 2 = White
- 3 = Blue
- 4 = Black
- 5 = Gray (Connect for use with remote input or Banner Radar Configuration software)



## Banner Measurement Sensor Software



Use the Banner Measurement Sensor software to:

- Quickly configure the sensor
- Easily monitor device status via the software
- Visualize the application in real-time
- Make adjustments to sensor settings on the fly

For more information, visit [www.bannerengineering.com/us/en/products/sensors/software/banner-measurement-sensor-software.html](http://www.bannerengineering.com/us/en/products/sensors/software/banner-measurement-sensor-software.html).

## T30R Specifications

Supply Voltage (Vcc)

Analog Voltage models: 12 V DC to 30 V DC

Analog Current and Dual Discrete models: 10 V DC to 30 V DC



Use only with a suitable Class 2 power supply (UL) or Limited Power Supply (CE)

**Power and Current Consumption, exclusive of load**

**Power consumption:** < 2.4 W  
**Current consumption:** < 100 mA at 24 V DC

**Response Time**

Analog update rate: 2 ms  
 Discrete output response: 6 ms  
 Speeds given for fast mode. See the Instruction Manual for additional details.

**Operating Temperature**

-40 °C to +65 °C (-40 °F to +149 °F)

**Certifications**

ETSI EN 305 550-1 V.1.2.1  
 ETSI EN 305 550-2 V.1.2.1  
 FCC Part 15, §15.258  
 FCC ID: UE3-T30R  
 IC ID: 7044A-T30R

 Banner Engineering BV Park Lane, Culliganlaan 2F bus 3 1831 Diegem, BELGIUM	 Turck Banner LTD Blenheim House Blenheim Court Wickford, Essex SS11 8YT GREAT BRITAIN	
		 IND. CONT. EQ. E224071 LISTED UL Environmental Rating: Type 1
 R-R-BE2-T30R	Complies with <b>IMDA Standards</b> <b>N4801-23</b>	

for others, contact Banner Engineering


Country of Origin: USA

Operation of the T30R sensor on board an aircraft or a satellite shall be prohibited.

Refer to the Instruction Manual, p/n 217048, for FCC and Industry Canada notification statements.

**T30R Dimensions**

All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.

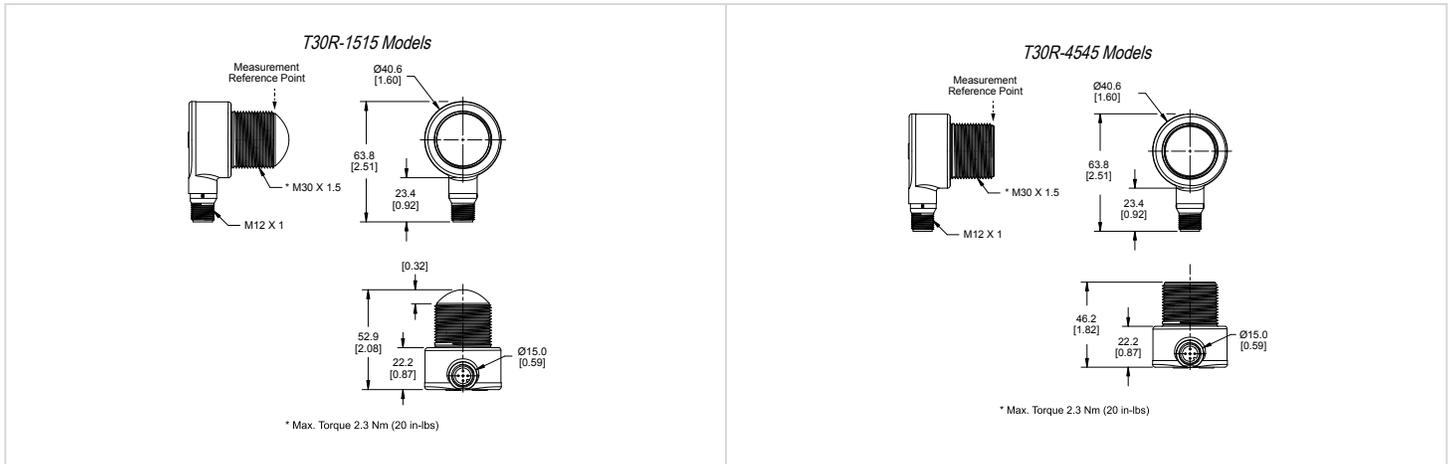

**Banner Engineering Corp Limited Warranty**

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

**THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.**

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: [www.bannerengineering.com](http://www.bannerengineering.com).

For patent information, see [www.bannerengineering.com/patents](http://www.bannerengineering.com/patents).